



Battery Operated PROGRAMMABLE Tap Timer

Single Outlet

GLOSSARY



Installing or Replacing Batteries.

It is recommended to use good quality alkaline 1.5 Volt AA batteries to get the best results. Simply unscrew the battery cover to access batteries.

As shown, install 2 x 1.5 Volt AA batteries in the correct orientation.

Screw cover back into place. The unit will close automatically when the battery voltage is low.

Installing to the tap.

1. Slide the locking nut over the tap outlet.
2. Screw the tap connector to the tap firmly by hand to ensure NO Leaks.
3. Place the tap timer onto the connector.
4. Screw the locking nut to the tap timer. (Arrow indicates a left hand thread)

CO1906 - RSR Socket



Rain Sensor Ready models have a socket to receive the RSR plug

Locking Nut

Tap Connector

Easy to read LCD display includes:

Current time

Individual Day Watering

Start Number

Run Time

Simple 4 button programming:
Set clock, Set Starts, Manual Start.

PROGRAMMING & OPERATING INSTRUCTIONS

Using the 4 control buttons, follow the steps below to program the tap timer.

Scroll using this button to set the time & day



Increase Value
Scroll using this button to program the timers automatic settings.

Decrease Value

Tips on using the buttons:

- A. Only the value in the field that is "flashing" can be adjusted using \uparrow or \downarrow .
- B. One press of any button will move you into the next field.
- C. Holding down the \uparrow or \downarrow button will speed up the programming process.
- D. Programming can be done away from the tap by simply fitting the batteries.

STEP 1 - SET CLOCK & DAY

(This product has a military clock, 24hr clock)

PRESS \downarrow button and the minutes will be flashing, adjust using \uparrow or \downarrow .

PRESS \downarrow button and the hours will be flashing, adjust using \uparrow or \downarrow .

PRESS \downarrow button to allow the setting of the current day of the week.

Scroll through days by **PRESSING** \uparrow until the current day is set. **PRESS** \downarrow to return to clock.

To get out of the programming cycle, **PRESS** \downarrow & \downarrow simultaneously.

STEP 2 - SET AUTOMATIC START(S)

The unit is capable of up to 9 individual starts per day. Each start can operate independently on the same day or on different days. Each start consists of a *start time*, the *days of the week* to operate and a run time. All fields need to have a setting for the unit to operate correctly. To get out of the programming cycle **PRESS** \downarrow & \downarrow simultaneously.

Set Start Time: (Note: Military Clock)

To set an automatic start time:

PRESS \downarrow & START No "1" will flash.

PRESS \downarrow & the minutes will flash, adjust using \uparrow or \downarrow .

PRESS \downarrow & the hour will flash, adjust using \uparrow or \downarrow buttons.

Set Watering Days:

PRESS \downarrow & "MON" will flash. To delete day **PRESS** \downarrow button & to re-activate, **PRESS** \uparrow . Continue through the 7 days by pressing \downarrow & either leave days active or delete as required.

Set Run Time:

PRESS \downarrow & the run time in minutes will be flashing, adjust using the \uparrow or \downarrow .

Minimum run time is 1 minute and the maximum run time is 255 minutes.

NOTE: If the run time is set to "OFF", this means there is **NO** run time recorded and will not water, even if a start time has been entered.

When setting a program, you must complete the full programming loop.

PRESS \downarrow to return to the clock which completes the programming loop.

If a second automatic start time is required, **PRESS** \downarrow and START No "1" will flash. Move to START No "2" position by pressing \uparrow button once.

Proceed by **PRESSING** \downarrow to set the start time, watering days and run time, adjust the values with the \uparrow or \downarrow buttons.

To get out of the programming cycle, back to the clock, **PRESS** \downarrow & \downarrow simultaneously.

STOP

To stop an automatic or manual watering cycle, **PRESS** \downarrow & \downarrow simultaneously.

Manual ON

To run manually for a length of time up to 255 minutes, **PRESS** \uparrow (manual on) and set the minutes required by **PRESSING** either \uparrow or \downarrow buttons.

Manual RUN a start

To run any automatic start time once, **PRESS** \downarrow (manually run a start). The display will show START No "1" and will self activate in 5 seconds or **PRESS** \downarrow button.

To activate any of the other starts, first **PRESS** \downarrow to enter into the "run a start" mode then followed by the \uparrow button until you reach your desired start number. The unit will activate that start time in 5 seconds or simply **PRESS** \downarrow .

If the unit does not turn on, your chosen start has the run time set to "OFF".

OFF / Winter Shut Down

The **CO1905** model requires each start to be individually programmed to "OFF".

Concom by **PRESSING** \downarrow & the start number will flash. **PRESS** \downarrow & the minutes will flash. At this point **PRESS** \uparrow & \downarrow simultaneously, the start time will disappear and "OFF" will be shown. This start time has now been suspended, not cancelled. To return to the clock **PRESS** \downarrow & \downarrow simultaneously. If you have more than one start time, each start time will need to be individually set to "OFF".

To re-activate an automatic start time. **PRESS** \downarrow & the start number 1 will be shown.

PRESS \uparrow to the desired start number, **PRESS** \downarrow & "OFF" will be displayed. Use either \uparrow or \downarrow to bring the start time active again & set as desired. The unit will remember any pre-sets.

The **CO1906** model comes with a rain sensor socket at the bottom of the timer to take a HOLMAN rain sensor with a plug fitted. This feature will automatically shut the tap timer off when the sensor is wet. If your not using a rain sensor, individual start times can be turned off *manually* during winter or after heavy rain. Refer to the above instructions to simply turn a start time OFF. If the system is to be OFF for an extended period it is recommended that the pressure be turned off at the tap and remove the batteries from the unit. It's recommended to removed the unit from the tap for storage.

Remove Batteries: Batteries corrode over time, so for best results remove & start a new season with new batteries. Removing batteries deletes **ALL** programmed information.

Note: Flat batteries will be shown by : BATTERY

Water Saver

To reduce the automatic run time (or times) by %, **PRESS** \downarrow & \downarrow buttons simultaneously when the clock is showing. The display will show 100 (100%) and bud (budget).

This represents the existing run time (or times) in the automatic program as being 100%.

To reduce the run time by percentage use \downarrow button. Example 50 (50%) will halve the automatic run time or times.

PRESS \downarrow & \downarrow simultaneously to return to the clock.

This feature is often used when the seasons change to allow different watering settings.

GUARANTEE

HOLMAN INDUSTRIES guarantee to the original purchaser that any product supplied will be free from defects in materials & workmanship for a period of two years from the date of purchase. Any product found to have defects in material or workmanship within the period of this guarantee shall be repaired or replaced by the manufacturer free of charge. The guarantor shall not be liable for any loss from use of the product or incidental or consequential damages including damages to other parts of any installation of which this product is part.

The guarantee shall not apply to any equipment which is found to have been improperly installed, set up or used in any way not in accordance with the instructions supplied with this equipment, or to have been modified, repaired or altered in any way without the express written consent of the company. This guarantee shall not apply to any batteries used in the equipment covered under this guarantee or to any damage which may be caused by such batteries. If the tap timer develops a fault, the product must be returned in adequate packing with a copy of your original invoice & description of any fault.

